


## HERE'S HOW TO INSTALL YOUR NEW ELECTRIC WATER HEATER

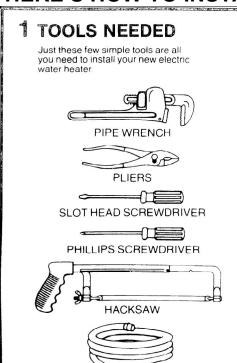

TO


**GARDEN HOSE** 

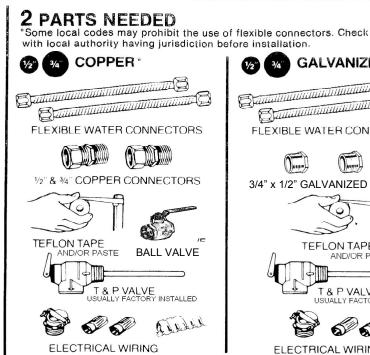

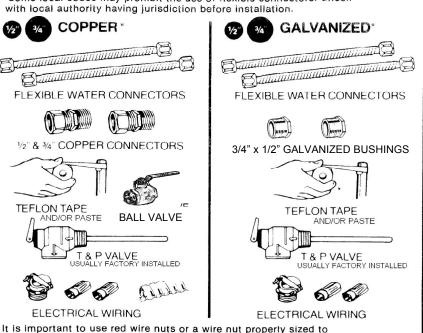

## 3 HERE'S HOW TO REMOVE YOUR OLD ELECTRIC WATER HEATER

connect #10 wire.

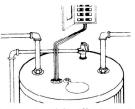


a. Turn electricity off going to the




b. Turn water off going to the water heater. Some installations require that the water be turned off to the entire house




c. Connect garden hose to drain valve near the bottom of the water heater and open valve. Water can be drained outside or to a suitable floor drain. Draining can be sped up by opening a hot water faucet or loosening any plumbing fitting on the top of the water heater.

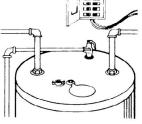

d. After you've made sure that electricity is OFF, the wiring con-

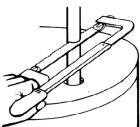


e (1). If you have copper piping going to the water heater...The two copper water pipes can be cut with a hacksaw or tubing cutter approximately four inches above the water heater top. This will avoid cutting off pipes too short. Additional cuts can be made later if necessary

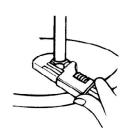

e (2). If you have galvanized piping going to the water heater...Loosen the two galvanized pipes with a pipe wrench at a union in each line. Remove the piping still connected to the heater. These pieces should be saved since they may be needed when reconnecting the new water heater.

The old water heater is now completely disconnected and ready to be moved. To install our new water heater, follow the instructions on reverse side



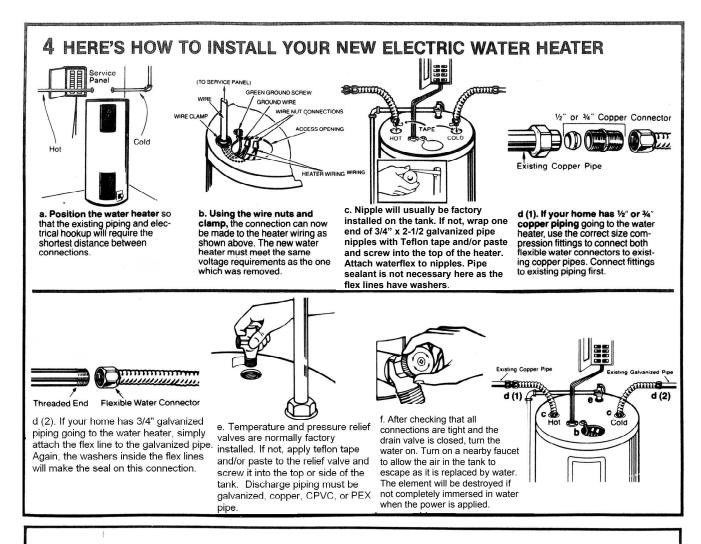

## 5 WIRING

## Check your local codes for wiring requirements. You may find that your existing wiring is adequate.

- a. Install and connect a circuit from the main breaker box. This will usually be a 30 amp double pole breaker and 10-2 w/gnd wire.
- **b. A standard**  $\frac{1}{2}$  conduit opening has been made in the heater junction box for the conduit connection.
- c. Provide a way to easily shut off the electric power when working on your heater. This could be a circuit breaker or fuse block in the entrance box or a separate disconnect switch.
- d. Connect the ground wire from the electrical service to the grounding screw near the junction service box cover.

